


# CLASSEQ G400/G400DUO/D500/D500DUO

## OPERATING INSTRUCTIONS

### Turning machine on /running a cycle / turning off & draining

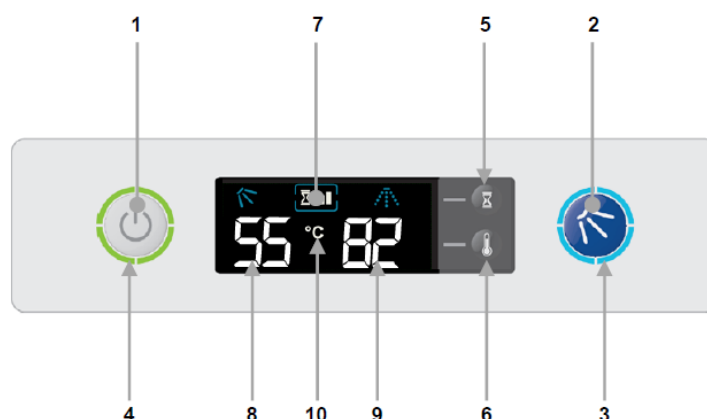

Item	Description
1	On/Off button
2	Cycle button
3	Cycle indicator
4	Heating indicator
5	Program select
6	Temperature units button
7	Program indication
8	Wash temperature
9	Rinse temperature
10	Temperature units display

#### Turning on the machine

- Make sure filters are in position
- Press the On/Off button, Item 1
- The machine will fill automatically
- The heating indicator, Item 4, will pulse orange while filling
- The heating indicator will turn solid green when the machine is ready

#### Selecting a cycle

- Press cycle select, Item 5, to select the length of wash
- Small bar is 2 minutes / Medium bar is 3 minutes / Large bar is 5 minutes

#### Starting cycle

- Press Item 2 – the cycle button
- The cycle indicator, Item 3, will then light up blue
- When the light goes off the cycle is finished

#### Turning off machine and draining

- Press the On/Off button
- The machine control will then turn off
- Then press the cycle button to drain the machine automatically
- The cycle indicator will flash blue to indicate it is draining
- Machine will do a self rinse
- When the cycle indicator stops flashing, the machine is now empty